

VIA SMART HOME PRODUCTS®

VOICE CONTROLLED

UNICORN LIGHT



NO WIFI
REQUIRED



NO APP
REQUIRED



7 COLORS



ADJUSTABLE
BRIGHTNESS



USB-A POWERED
(CORD INCLUDED)



BUILT-IN
MICROPHONE



QUICK GUIDE

Congratulations on your new Unicorn light! Please save this quick guide so that the built-in commands are easily accessible.

Begin by plugging in the Unicorn to a USB-A port or adapter. Once plugged in, the Unicorn will illuminate. **To wake the Unicorn, simply say the trigger "Hey Unicorn!" and the Unicorn will blink once indicating that it is now listening for commands.** Once "Hey Unicorn!" is called and the Unicorn blinks once, you have 5 seconds to say a command before the Unicorn goes back to standby mode. Once in standby mode, simply say the trigger "Hey Unicorn" again to reactivate.

Trigger & Commands must be spoken exactly as written.

18 BUILT-IN COMMANDS:

Wake the unicorn by saying "Hey Unicorn", followed by one of the 18 commands below and on the back of this quick guide.

Voice Commands	Lighting Effect
Turn on the light	LEDs light up
Turn off the light	LEDs turn off
Slow pulse	Starting from a single light color, simply say "Hey Unicorn – Slow Pulse" and LEDs will slowly fade in and out.
Steady on	Starting from a single light color, simply say "Hey Unicorn – Steady On" and LEDs will remain on.
Brighten the light	Increases brightness level (up to 4 brightness settings). If the Unicorn blinks after saying "brighten the light", this means you have reached the maximum brightness setting.

Voice Commands	Lighting Effect
Dim the light	Decreases brightness level (up to 4 brightness settings). If the Unicorn blinks after saying "dim the light", this means you have reached the minimum brightness setting.
Maximum brightness	Increases LEDs to maximum brightness. If the Unicorn blinks after saying "maximum brightness", this means you have already reached the maximum brightness setting.
Minimum brightness	Decreases LEDs to minimum brightness. If the Unicorn blinks after saying "minimum brightness", this means you have already reached the minimum brightness setting.
Change color	LEDs will change colors in the following sequence: White – Yellow – Red – Green – Blue – Purple - Pink
White light	LEDs change to white
Yellow light	LEDs change to yellow
Red light	LEDs change to red
Green light	LEDs change to green
Blue light	LEDs change to blue
Purple light	LEDs change to purple
Pink light	LEDs change to pink
Color changing	LEDs automatically cycle through each color. To exit color changing mode, simply say "Hey Unicorn" followed by a light color.
Music mode	LEDs pulse and blink to the beat of YOUR music! To exit music mode, simply say "Hey Unicorn" followed by a light color.

If the Unicorn freezes, simply disconnect the power and reconnect it after 5 seconds. The Unicorn may not respond to commands in noisy environments.